




**BERGEON**

Swiss made

**No 6607**

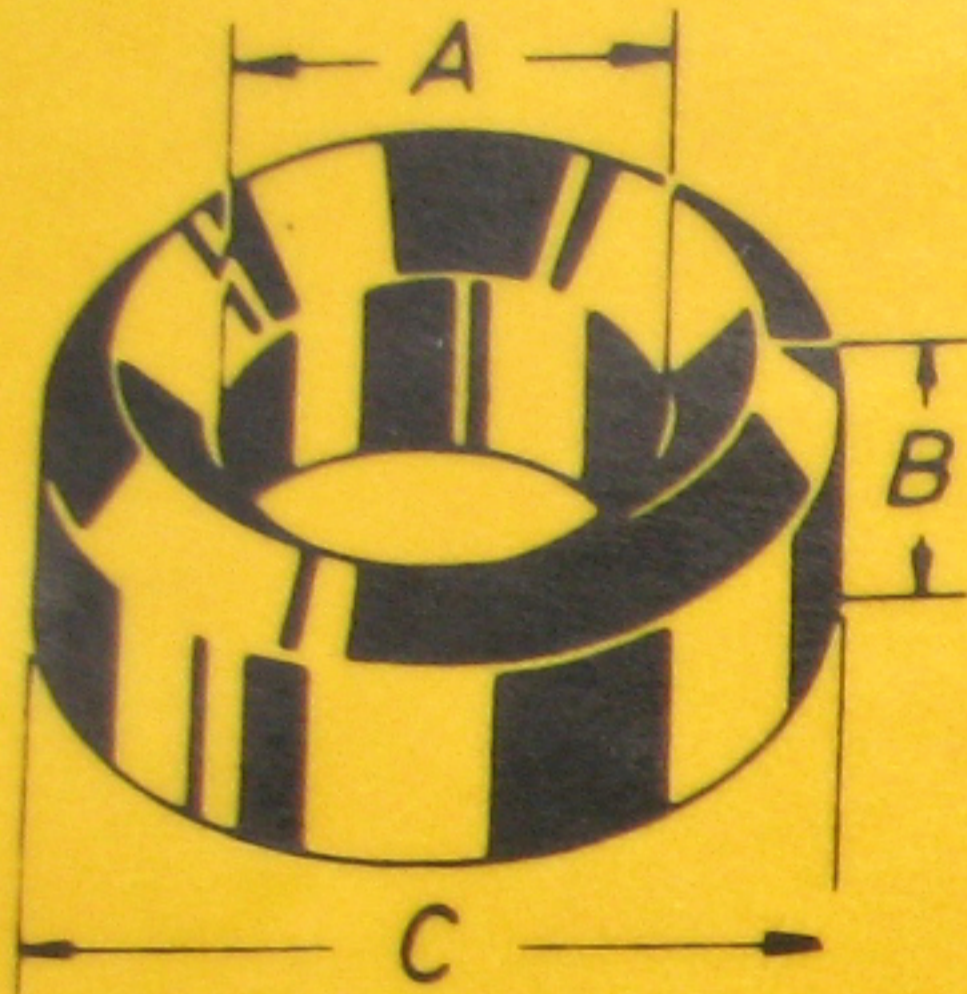

**Assortiment de 210 bouchons à chasser. En laiton.**

Contenu: 7 bouchons de chaque No précédé de K.

**Sortiment von 210 Einpressfuttern. Aus Messing.**

Inhalt: 7 Futter in jeder K-Nummer.

**Assortment of 210 bushings. In brass.**

Contents: 7 bushings of each No preceded by letter K.

**Surtido de 210 buchones a embutir. De latón.**

Contenido: 7 buchones de cada No precedido de K.

No K 33	No K 11	No K 34	No K 12	No K 35	No K 13	No K 36	No K 14	No K 37	No K 66	No K 15	No K 38	No K 16	No K 39	No K 17
A = 0.60	0.70	0.70	0.80	0.80	0.90	0.90	1.00	1.00	1.10	1.10	1.10	1.20	1.20	1.30
B = 1.90	1.40	1.90	1.40	1.90	1.40	1.90	1.40	1.90	1.40	1.40	1.90	1.40	1.90	1.40
C = 1.80	1.80	1.80	1.80	1.80	1.80	1.80	2.70	1.80	1.80	2.70	2.70	2.70	2.70	2.70
No K 40	No K 18	No K 41	No K 19	No K 42	No K 20	No K 43	No K 67	No K 88	No K 21	No K 44	No K 68	No K 89	No K 22	No K 45
A = 1.30	1.40	1.40	1.50	1.50	1.60	1.60	1.70	1.70	1.80	1.80	1.90	1.90	2.00	2.00
B = 1.90	1.40	1.90	1.40	1.90	1.40	1.90	1.40	1.90	1.40	1.90	1.40	1.90	1.40	1.90
C = 2.70	2.70	2.70	2.70	2.70	2.70	2.70	2.70	2.70	2.70	2.70	2.70	2.70	3.50	3.50